


# Beam Clamp

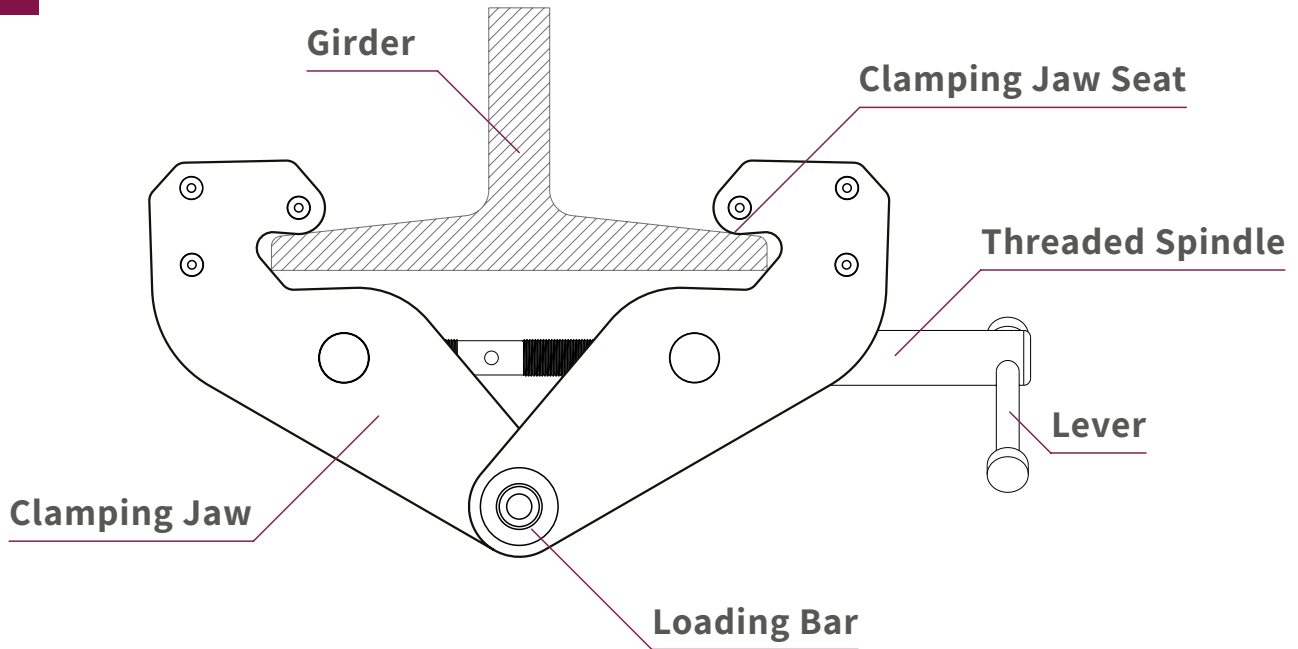

## INSTALLATION INSTRUCTIONS

1. Rotate the lever counter-clockwise to open the Clamping Jaws.
2. Position the clamp onto the girder.
3. Rotate the lever clockwise until hand tight to close the Clamping Jaws.
4. Check that the Clamping Jaw Seat has fully engaged with the girder.
5. Ensure that the hoist or sling being attached to the girder clamp is positioned directly under the centre-line of the girder and the clamp.

## VARIATIONS

WLL	Beam width
1T	75 - 230 mm
2T	75 - 230 mm
3T	80 - 320 mm
5T	80 - 320 mm
10T	90 - 320 mm



## ⚠ WARNING

- ONLY USE** the clamp on girder widths that fall within the specified limits.
  - DO NOT** exceed the Working Load Limit (W.L.L.) of the clamp.
  - DO NOT** use clamps that are damaged or deformed.
  - DO** inspect the clamp before and after each use.
  - DO NOT** attempt to repair a damaged clamp unless you are authorized.
  - DO NOT** stand under a load or an installed clamp.
- This product should only be used by trained professionals.



**SCAN QR**  
For information  
about all our  
products.

